




FUM 12



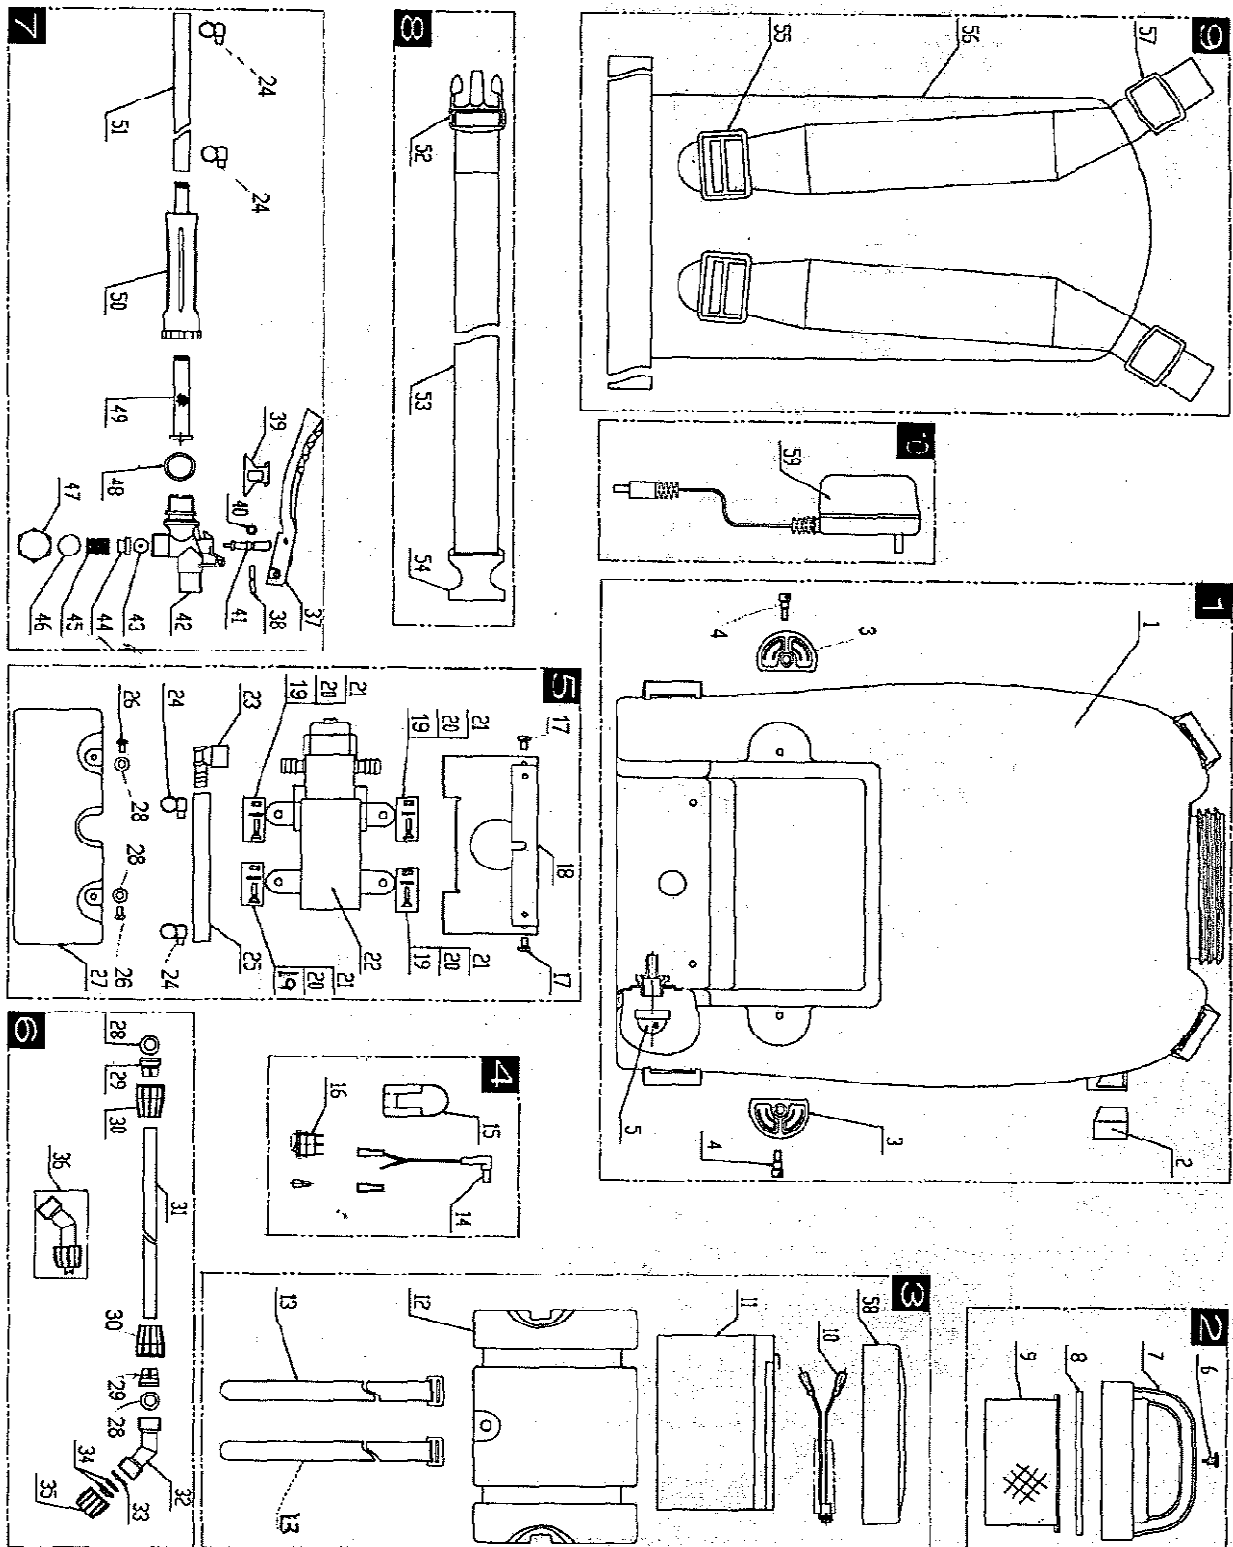

Exploded Diagram FUM 12

Num	Reference	Description	Q	Num	Reference	Description	Q
1	78FUM12B-1	Tank	1	31	78FUM12B-31	Spear tube	1
2	78FUM12B-2	Lance bracket	1	32	78FUM12B-32	Elbow spear tip	1
3	78FUM12B-3	Battery bracket	2	33	78FUM12B-33	Ring board	1
4	78FUM12B-4	Battery bracket screw	2	34	78FUM12B-34	Nozzle (spray)	1
5	78FUM12B-5	Filter	1	35	78FUM12B-35	Nut (Spray)	1
6	78FUM12B-6	Vent valve	1	36	78FUM12B-36	Nozzle kit	1
7	78FUM12B-7	Tank cover	1	37	78FUM12B-37	trigger	1
8	78FUM12B-8	Tank cover gasket	1	38	78FUM12B-38	Pin	1
9	78FUM12B-9	Cover tank filter	1	39	78FUM12B-39	Plate	1
10	78FUM12B-10	Battery wires	1	40	78FUM12B-40	O-ring	1
11	78FUM12B-11	Battery	1	41	78FUM12B-41	Gun piston	1
12	78FUM12B-12	Battery support	1	42	78FUM12B-42	Gun body	1
13	78FUM12B-13	Battery strap	2	43	78FUM12B-43	Gun board	1
14	78FUM12B-14	Switch wire	1	44	78FUM12B-44	Gun case	1
15	78FUM12B-15	Switch lid	1	45	78FUM12B-45	Gun spring	1
16	78FUM12B-16	Switch	1	46	78FUM12B-46	Gun washer	1
17	78FUM12B-17	screw (4x15)	2	47	78FUM12B-47	Gun bolt	1
18	78FUM12B-18	Pump support	1	48	78FUM12B-48	O-ring	1
19	78FUM12B-19	screw (4x15)	4	49	78FUM12B-49	Gun filter	1
20	78FUM12B-20	Washer 4	6	50	78FUM12B-50	Gun grip	1
21	78FUM12B-21	Nut (M4)	4	51	78FUM12B-51	Hose	1
22	78FUM12B-22	Pump & Motor	1	52	78FUM12B-52	Belt connector male	1
23	78FUM12B-23	Connector	1	53	78FUM12B-53	Belt connector	1
24	78FUM12B-24	Bracket	4	54	78FUM12B-54	Belt connector female	1
25	78FUM12B-25	Tube	1	55	78FUM12B-55	Inferior Buckle	2
26	78FUM12B-26	Screw (4x8)	2	56	78FUM12B-56	Harnes	1
27	78FUM12B-27	Cover pump cover	1	57	78FUM12B-57	Buckle	2
28	78FUM12B-28	Ring board	4	58	78FUM12B-58	Battery cover	1
29	78FUM12B-29	Clamp tube	2	59	78FUM12B-59	Battery charger	1
30	78FUM12B-30	Tightening Cone tube	2				