




## GT4500

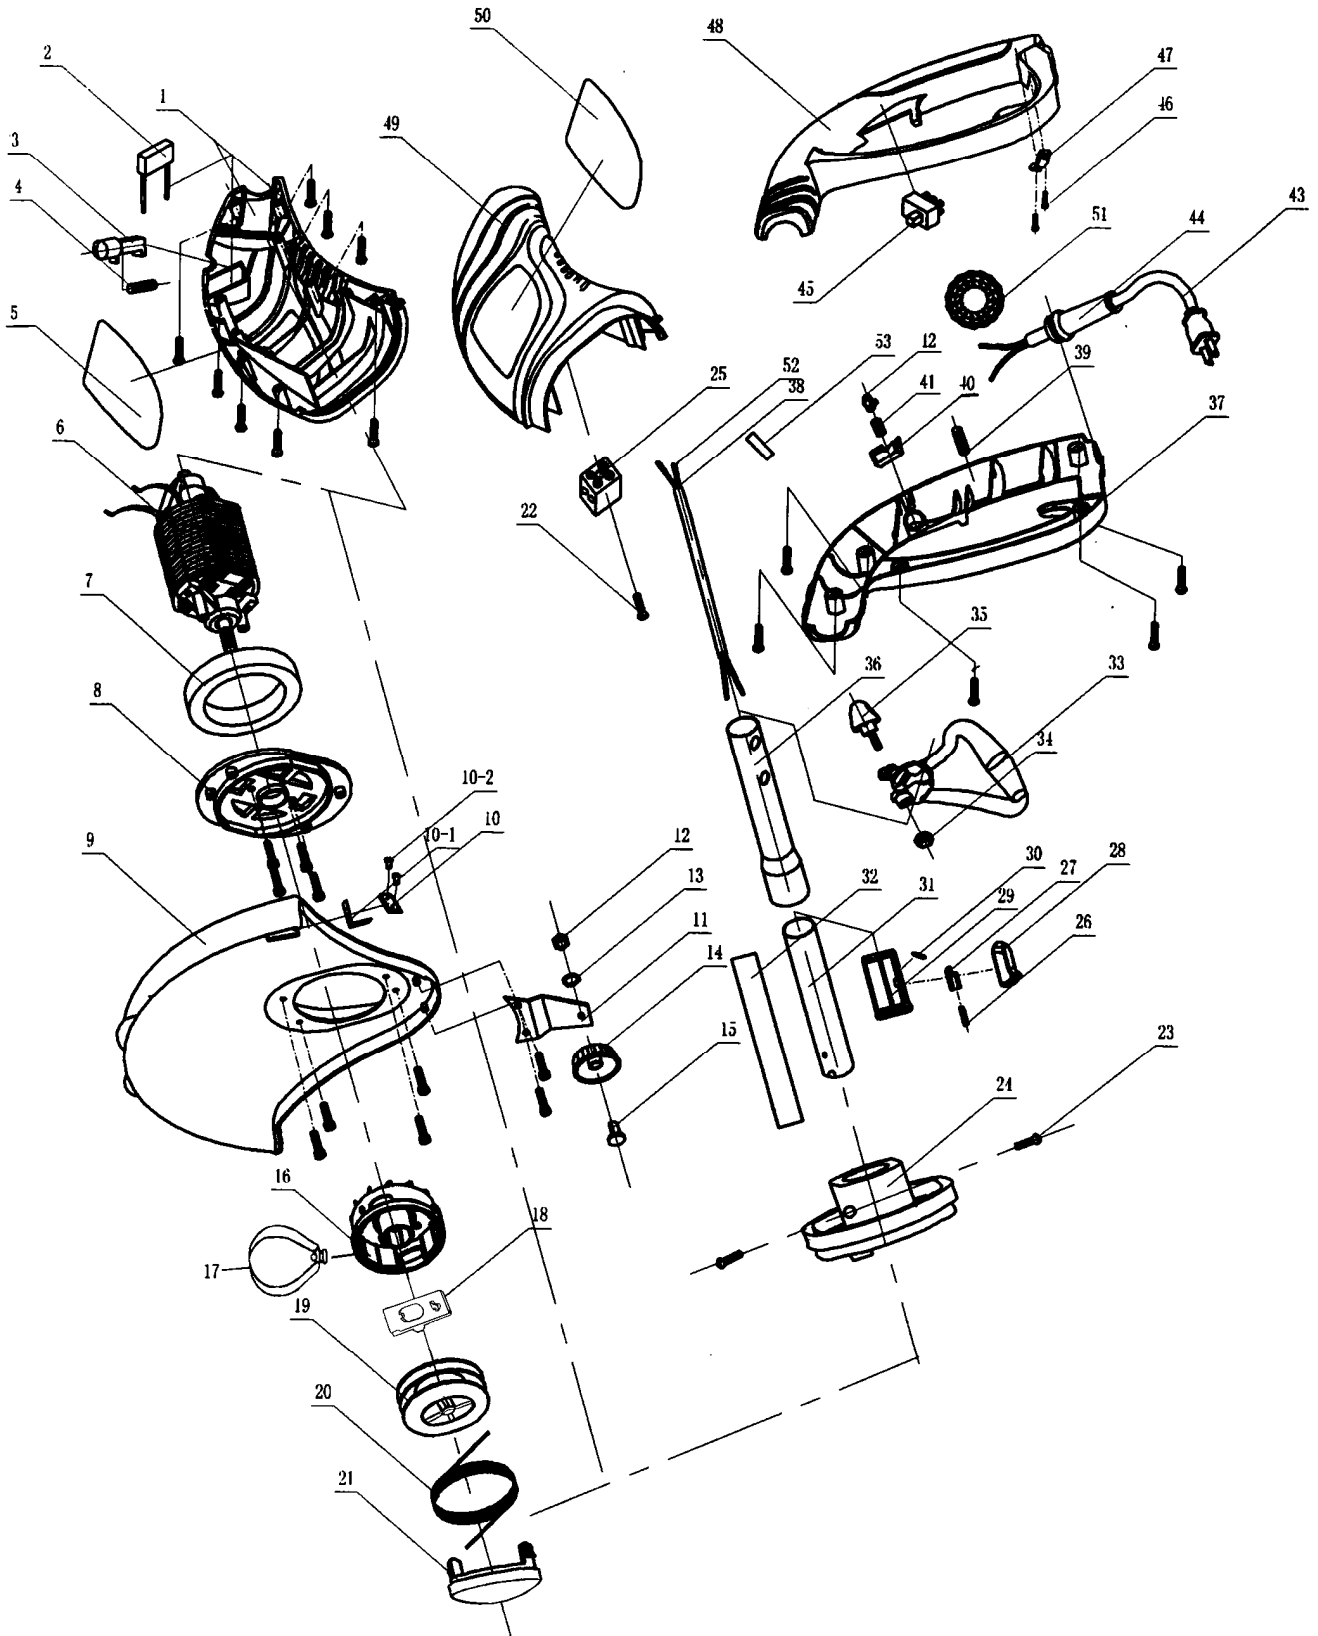

1	78GT4500-1	Engine half cover	1	27	78GT4500-27	Axle lock	1
2	78GT4500-2	Trainer	1	28	78GT4500-28	Pushbutton lock	1
3	78GT4500-3	Push button	1	29	78GT4500-29	Guide bushing block	1
4	78GT4500-4	Spring button	1	30	78GT4500-30	Pin Lock	1
5	78GT4500-5	Label (no disp.)	1	31	78GT4500-31	Lower tube	1
6	78GT4500-6	Engine (complete)	1	32	78GT4500-32	Label (no disp.)	1
7	78GT4500-7	Ring base	1	33	78GT4500-33	Handgrip	1
8	78GT4500-8	Base engine	1	34	78GT4500-34	Nut grip	1
9	78GT4500-9	Protector	1	35	78GT4500-35	Handle tighten grip	1
10	78GT4500-10	Razor blade	1	36	78GT4500-36	Top tube	1
10-1	78GT4500-10-1	Blade Protector	1	37	78GT4500-37	Semihandle right	1
10-2	78GT4500-10-2	Blade screw	2	38	78GT4500-38	Int cable sheath.	1
11	78GT4500-11	Support wheel	1	39	78GT4500-39	Spring	1
12	78GT4500-12	Wheel nut	1	40	78GT4500-40	Pushbutton switch	1
13	78GT4500-13	Wheel Washer	1	41	78GT4500-41	Spring button	1
14	78GT4500-14	Wheel cap	1	42	78GT4500-42	Pusher	1
15	78GT4500-15	Screw wheel	2	43	78GT4500-43	Cable + plug	1
16	78GT4500-16	Body head thread	1	44	78GT4500-44	Cable Sleeve	1
17	78GT4500-17	Ring yarn	2	45	78GT4500-45	Switch	1
18	78GT4500-18	Head plate	1	46	78GT4500-46	Screw	2
19	78GT4500-19	Thread spool	1	47	78GT4500-47	Press cable	1
20	see acc.	Thread 1, 6 Diameter	1	48	78GT4500-48	semihandle left	1
21	78GT4500-21	Top head	1	49	78GT4500-49	Engine half cover	1
22	78GT4500-22	Screw	2	50	78GT4500-50	Label (no disp.)	1
23	78GT4500-23	Screw pin	1	51	78GT4500-51	Ring connector	1
24	78GT4500-24	Turn base	1	52	78GT4500-52	Internal Cable	1
25	78GT4500-25	Clamp connector	1	53	78GT4500-53	Connector	1
26	78GT4500-26	Spring Lock	1				