


MODEL 20605x50A

REPAIR PARTS

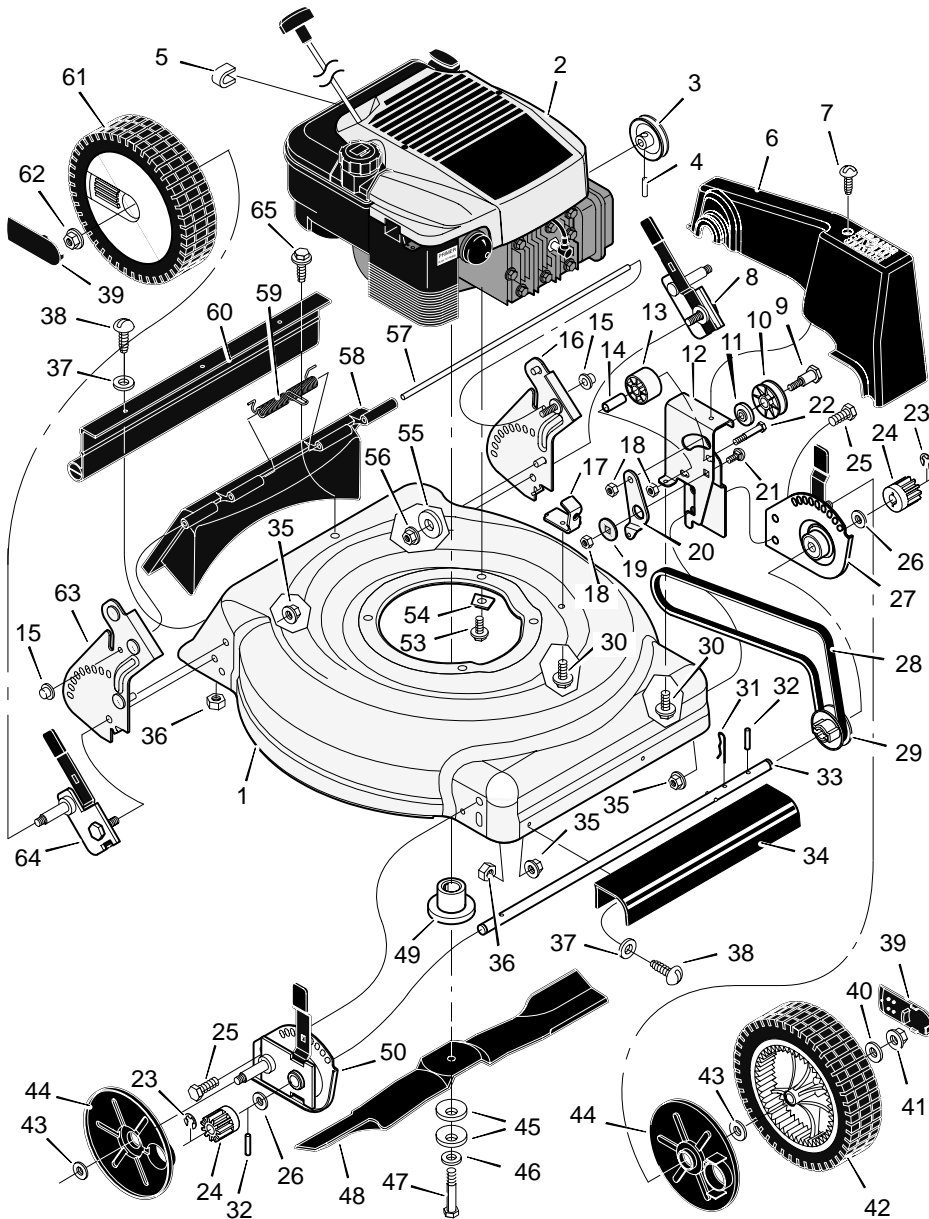




25	Bolt	1x85
26	Washer	17x186
27	Adjuster, Left Front Height	671938
28	Belt	37x91
29	Pulley, Axle	71791
30	Screw	26x263
31	Pin, Hair	31x9
32	Pin, Spring	43629
33	Axle	671931
34	Cover, Axle (Gray)	672108
35	Nut, Flange	15x68
36	Nut, Hex	15x102
37	Washer	17x38
38	Screw	4x21
39	Hub Cap - Optional	672122
40	Washer	17x169
41	Nut, Flange	15x84
42	Wheel, Drive (Dark Gray)	71133
43	Washer	17x120
44	Cover, Dust	71780
45	Washer, Belleville	17x137
46	Washer	17x124
47	Bolt	17x142
48	Blade	671921E701
49	Adapter, Blade	71056
50	Adjuster, Right Front Height	671939
53	Bolt, Engine	25x6
54	Support, Engine	671989
55	Washer	17x146
56	Nut, Flange	15x79
57	Rod, Pivot	215x17 Z
58	Door, Rear (Gray)	672107
59	Spring	166x44
60	Guard, Rear	671970
61	Wheel, Rear (Dark Gray)	71132
62	Nut, Flange	15x81
63	Bracket, Right Handle	671944
64	Adjuster, Right Height	671974
65	Screw	26x259
--	Instruction Book	F-97453

1	Housing	776003
2	Engine	----
3	Pulley, Engine	71434
4	Pin, Spring	32x64
5	Stop, Rope (Recoil-Start)	42189
6	Cover, Belt (Gray)	672109
7	Screw	26x279
8	Adjuster, Left Height	671975
9	Bolt, Shoulder	9x50
10	Pulley	71779
11	Spacer	71788
12	Bracket, Idler Support	671935 Z

13	Pulley, Idler	71778
14	Bearing	71793
15	Push On Cap	28x42
16	Bracket, Left Handle	671943
17	Bracket, Cable	671934
18	Nut, Hex	15x43
19	Spacer	71789
20	Arm, Idler	671936
21	Bolt, Carriage	2x53
22	Bolt, Shoulder	1x81
23	E-Ring	11x16
24	Gear, Pinion	71792

MODEL 20605x50A

REPAIR PARTS

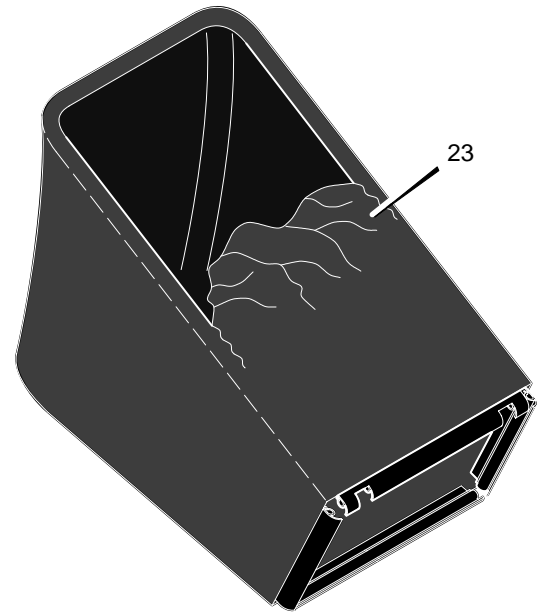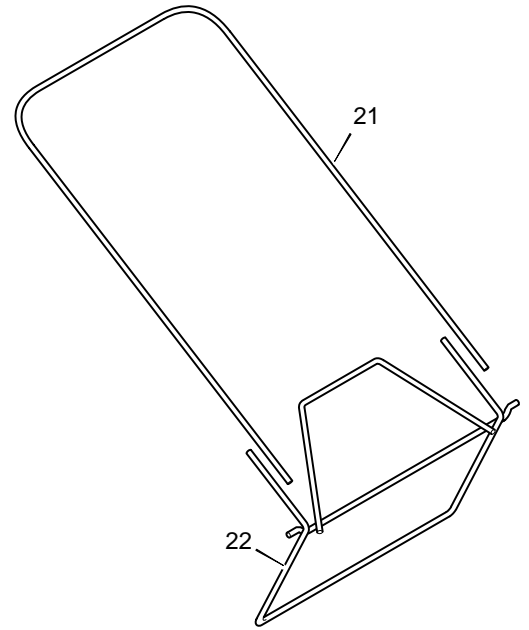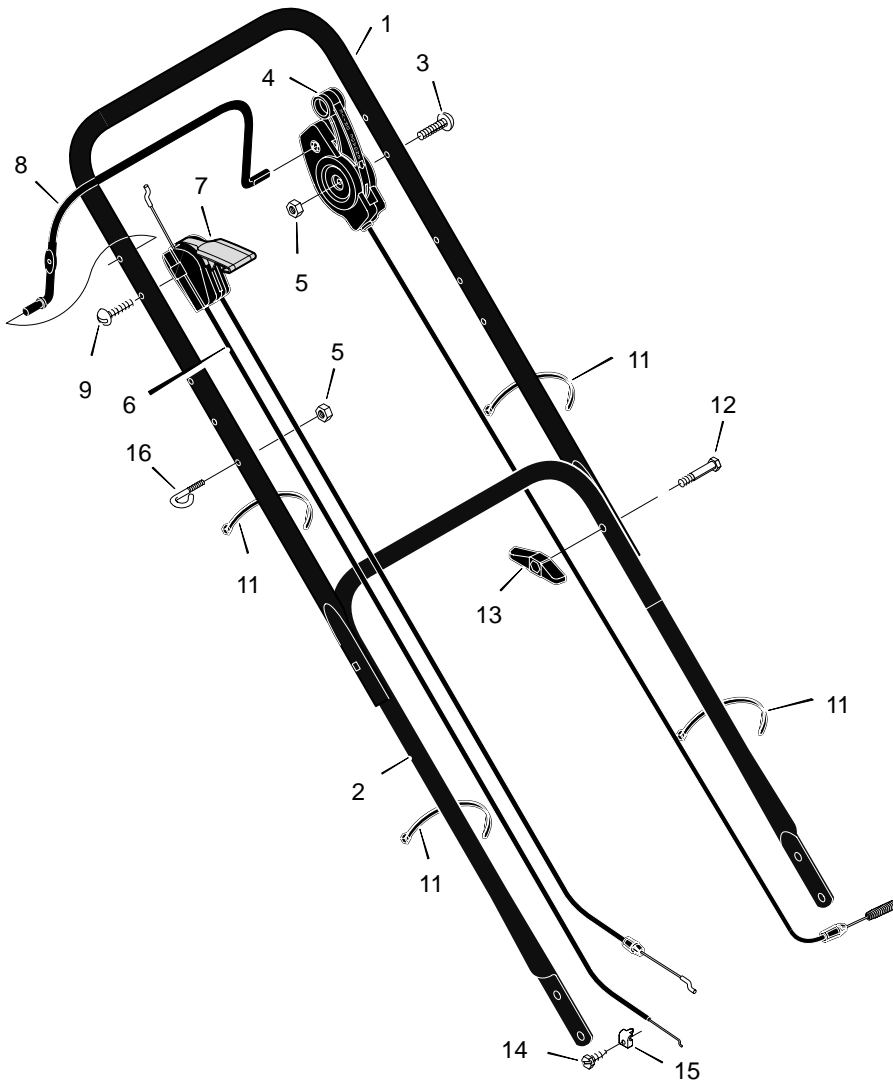

1	Handle, Upper (Gray)	671918E724	8	Engine Stop Lever	671922E245	16	Guide, Rope	43956
2	Handle, Lower (Gray)	671917E724	9	Screw	3x144	21	Frame, Top	71592
3	Bolt	3x144	11	Fastener, Cable	71372	22	Frame Assembly	672068
4	Control, Drive	672067	12	Bolt	2x77	23	Bag, Cloth	672110
5	Locknut	15x116	13	Knob	71294			
6	Cable, Stop	672130	14	Screw	26x268			
7	Throttle Control	672144	15	Clamp	42294			