


MODEL 22605x50A

REPAIR PARTS

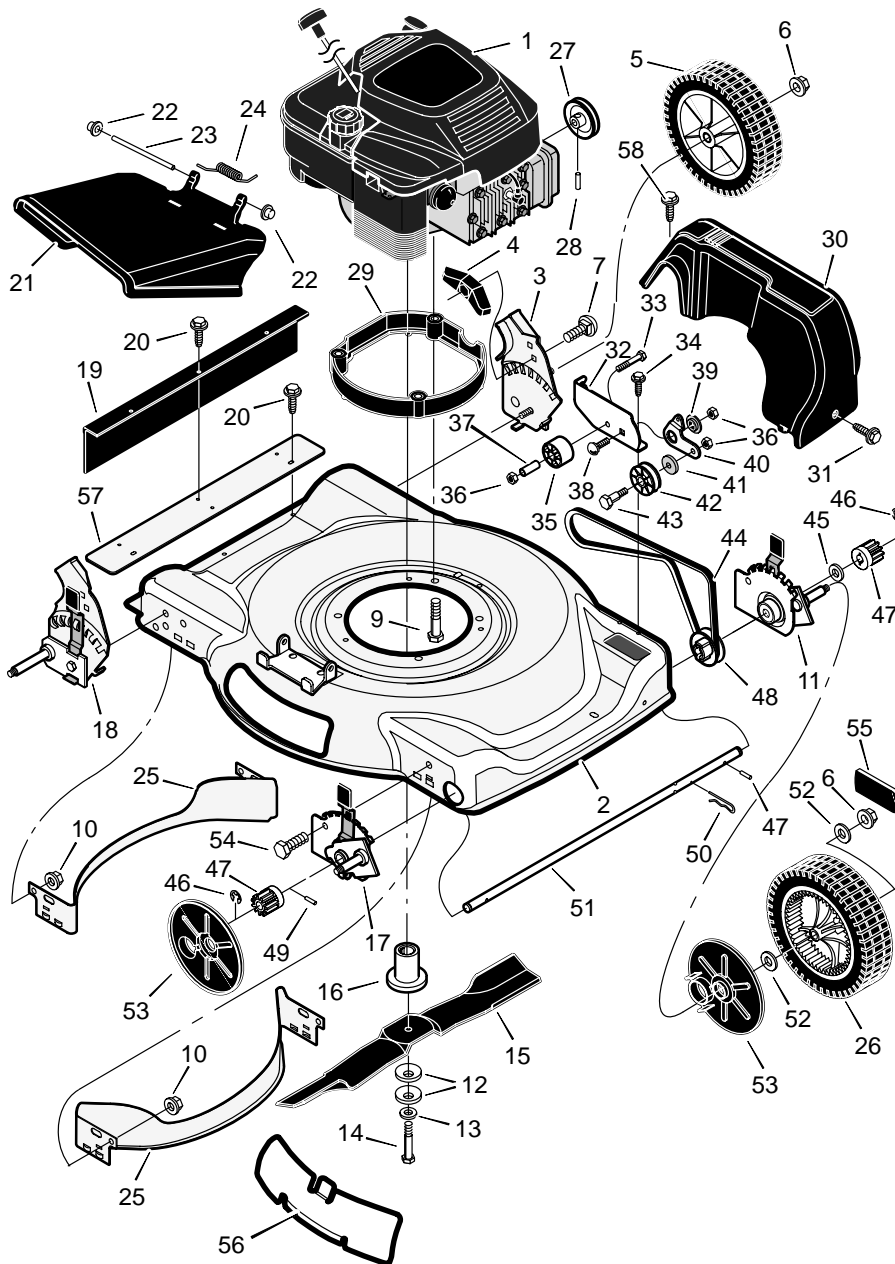


1	Engine *	-----
2	Housing	776049
3	Height Adjuster, Left Rear	672641
4	Knob	71495
5	Wheel and Tire, Rear	672082
6	Locknut, Flange	15x84
7	Bolt, Carriage	2x81
9	Bolt, Engine	25x11
10	Nut	15x68
11	Height Adjuster, Left Front	672643
12	Washer, Belleville	17x137

13	Washer	17x124
14	Bolt, Hex	1x153
15	Blade	71849E701
16	Adapter, Blade	672503
17	Height Adjuster, Right Front	672642
18	Height Adjuster, Right Rear	672640
19	Guard, Rear	672500
20	Screw	26x245
21	Deflector, Chute	672721
22	Push-On Cap	28x42
23	Pin, Pivot	215x11 Z

24	Spring	166x5
25	Baffle	672332E700
26	Wheel and Tire, Drive	672083
27	Pulley	71434
28	Pin, Spring	32x64
29	Base, Engine	672671E700
30	Cover, Belt	672722
31	Screw	26x279
32	Bracket, Idler Support	672423 Z
33	Bolt	1x81
34	Screw	26x263
35	Idler	71778
36	Locknut	15x43
37	Bearing	71793
38	Bolt, Carriage	2x53
39	Spacer	71789
40	Arm, Idler	71742 Z
41	Spacer	71788
42	Pulley, Idler	71779
43	Bolt, Shoulder	9x50
44	Belt	37x94
45	Washer	17x186
46	Ring, Retainer	11x16
47	Gear, Pinion	71792
48	Pulley	71791
49	Pin, Drive	43692
50	Pin, Hair	31x9
51	Axle	672508
52	Washer	17x169
53	Cover, Dust	71780
54	Bolt	1x85
55	Hub Cap	43615
56	Plate, Mulcher	672422 Z
57	Extension, Rear	672711
58	Screw	26x289
-	Book, Instruction	F-98471

MODEL 22605x50A

REPAIR PARTS

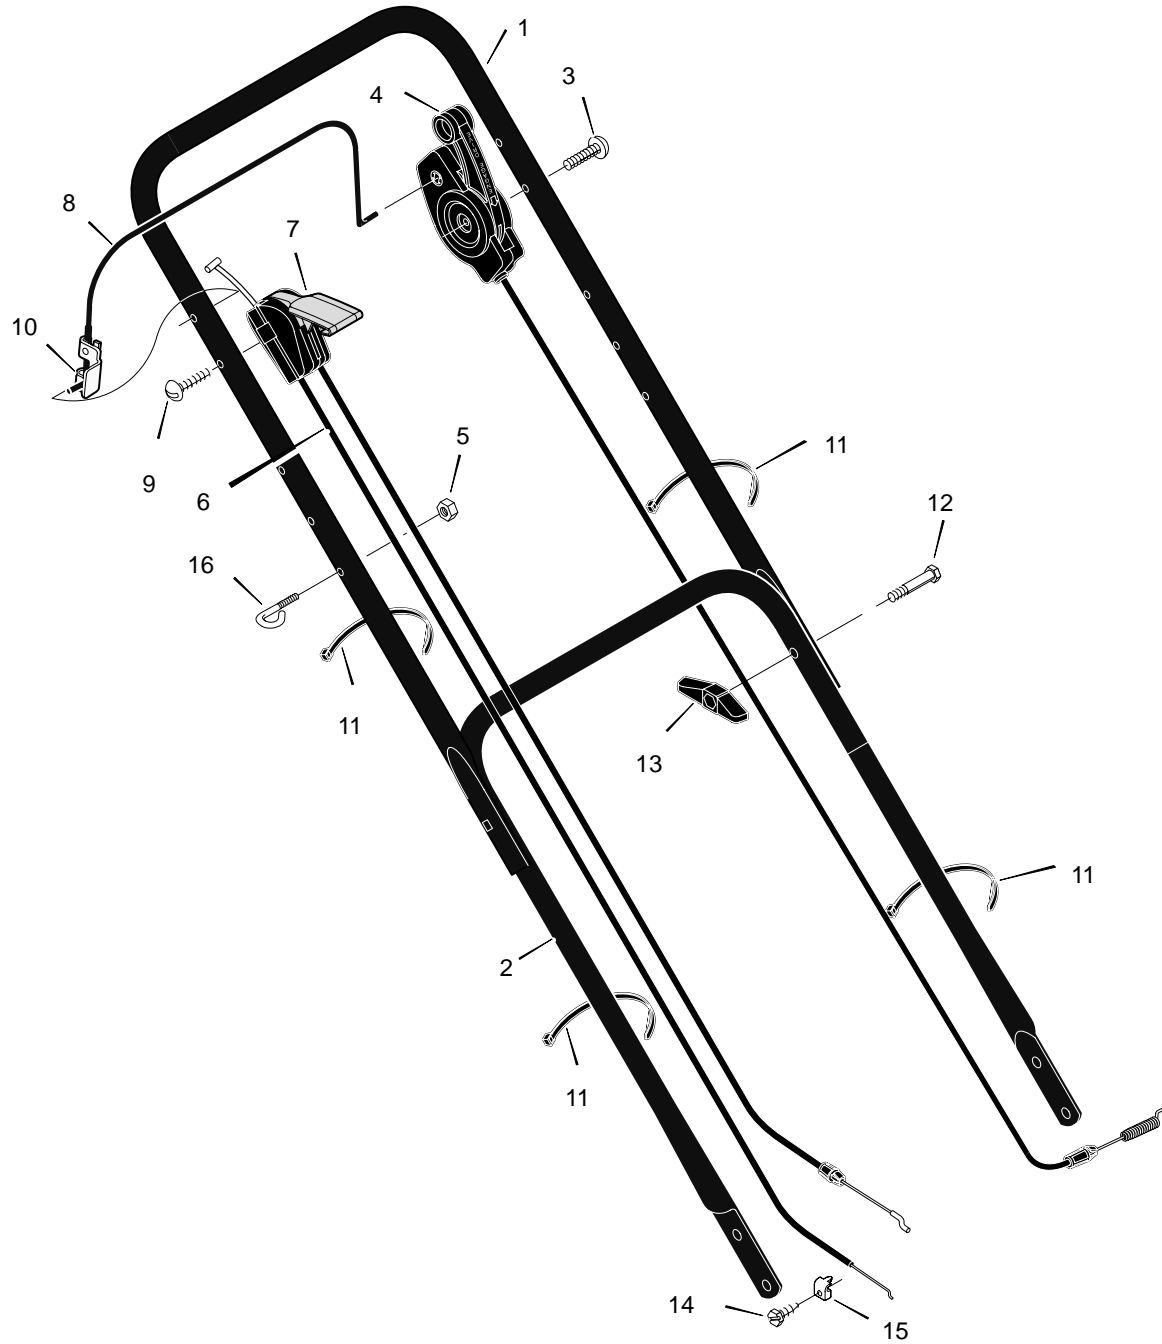

1	Handle, Upper (Black)	672666E701	9	Screw	25x14
2	Handle, Lower (Black)	71137E701	10	Bracket, Stop Lever	43628 BC
3	Screw	26x256	11	Fastener, Cable	71372
4	Control, Drive	672581	12	Bolt	2x77
5	Locknut	15x116	13	Knob	71294
6	Cable, Stop	672565	14	Screw	26x268
7	Throttle Control	672654	15	Clamp	42294
8	Lever, Stop	672571E700	16	Guide, Rope	71530