


MODEL 22605x51B

REPAIR PARTS

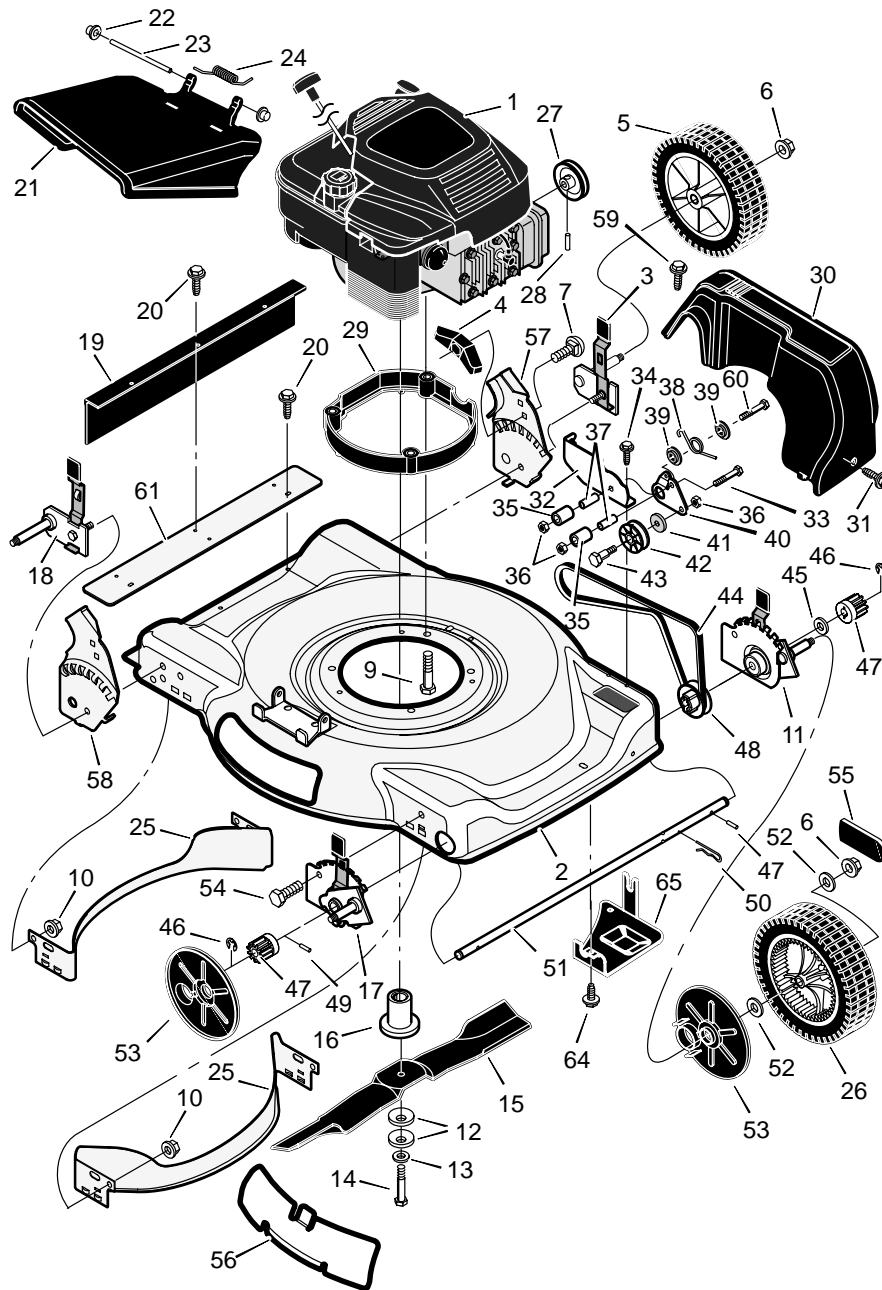


24	Spring	166x5
25	Baffle	672744E700
26	Wheel and Tire, Drive	71133
27	Pulley	71434
28	Pin, Spring	32x64
29	Base, Engine	672671E700
30	Cover, Belt	1101025
31	Screw	26x259
32	Bracket, Idler Support	672751 Z
33	Bolt	1x81
34	Screw	26x263
35	Idler, Backside	672751 Z
36	Locknut	15x43
37	Bearing	71793
38	Spring	166x45
39	Spacer	71789
40	Arm, Pivot	672753 Z
41	Spacer	71788
42	Pulley, Idler	71779
43	Bolt, Shoulder	9x50
44	Belt	37x100
45	Washer	17x186
46	Ring, Retainer	11x16
47	Gear, Pinion	71792
48	Pulley	71791
49	Pin, Drive	43629
50	Pin, Hair	31x9
51	Axle	672508
52	Washer	17x169
53	Cover, Dust	71780
54	Bolt	1x85
55	Hub Cap	43615
56	Plate, Mulcher	672422 Z
57	Bracket, Left Handle	672335E700
58	Bracket, Right Handle	672334E700
59	Screw	26x289
60	Bolt	1x120
61	Extension, Rear	672711E700
64	Screw	26x288
65	Shield, Debris	1101026E700
-	Book, Instruction	F-000451L

1	Engine *	-----	13	Washer	17x124
2	Housing	776049	14	Bolt, Hex	1x153
3	Height Adjuster, Left Rear	672641	15	Blade	672735E701
4	Knob	71495	16	Adapter, Blade	672503
5	Wheel and Tire, Rear	71132	17	Height Adjuster, Right Front	672642
6	Locknut, Flange	15x84	18	Height Adjuster, Right Rear	672640
7	Bolt, Carriage	2x81	19	Guard, Rear	672738
9	Bolt, Engine	25x11	20	Screw	26x245
10	Nut	15x68	21	Deflector, Chute	672721
11	Height Adjuster, Left Front	672643	22	Push-On Cap	28x42
12	Washer, Belleville	17x137	23	Pin, Pivot	215x11 Z

MODEL 22605x51B

REPAIR PARTS

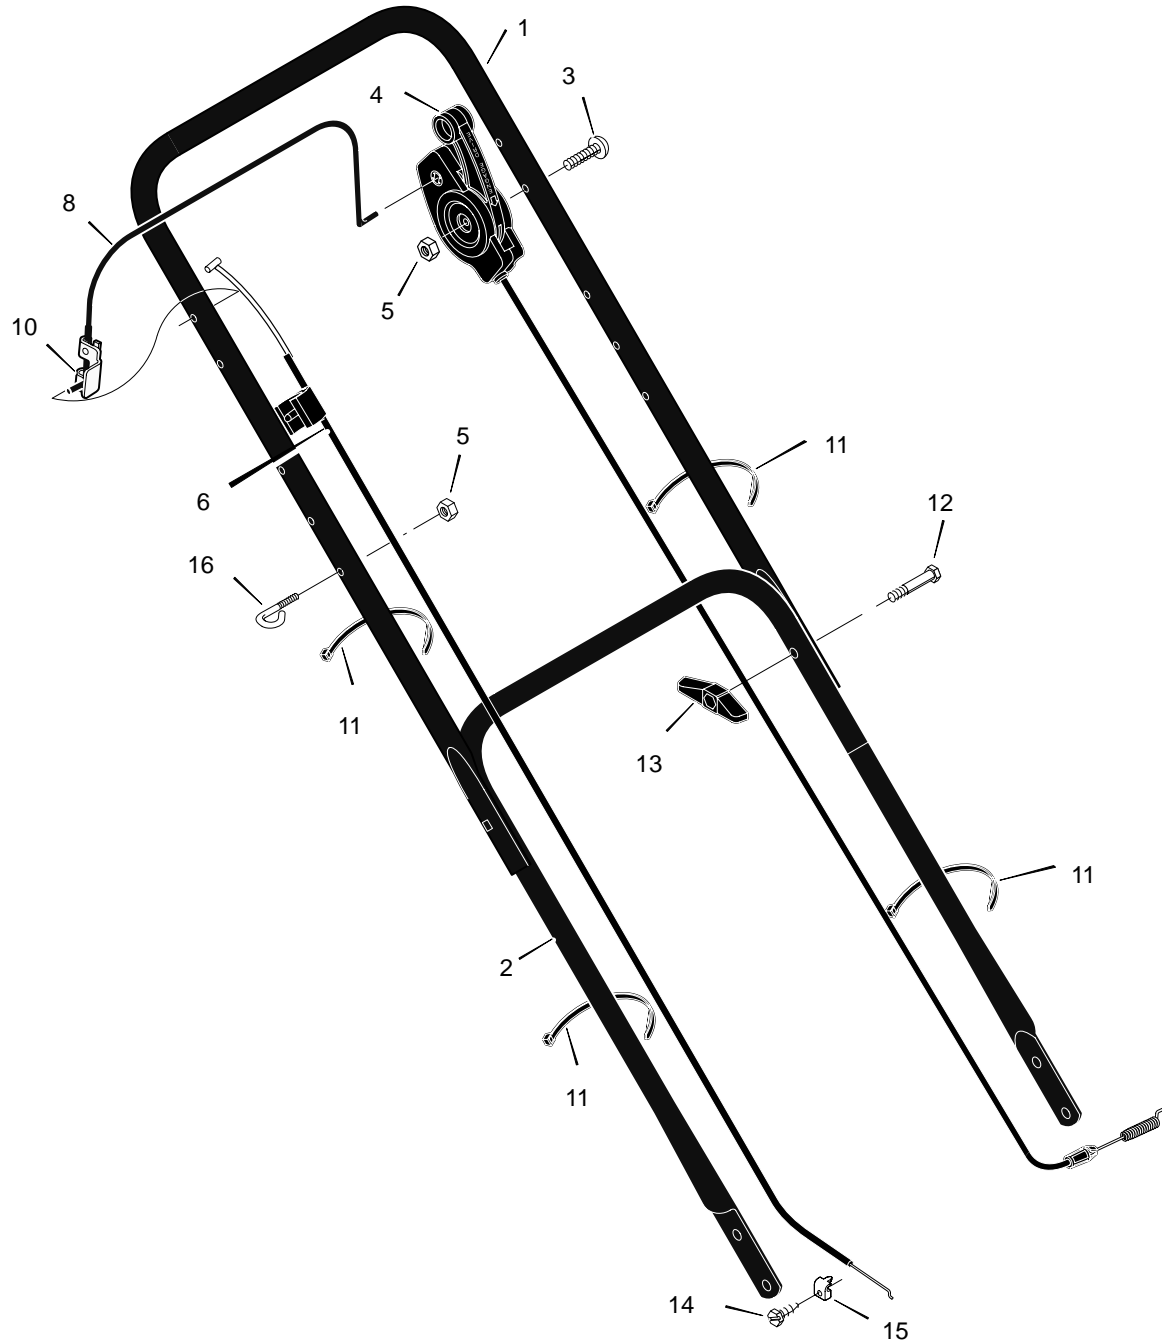

1	Handle, Upper (Black)	71581E701	5	Locknut	15x116	11	Fastener, Cable	71372
2	Handle, Lower (Black)	71137E701	6	Cable, Stop	672839	12	Bolt	2x77
3	Screw	25x14	8	Lever, Stop	672879E700	13	Knob	71294
4	Control, Drive	672873	10	Bracket, Stop Lever	43628 BC	16	Guide, Rope	71530